


Note: Please check sizes are correct before drilling

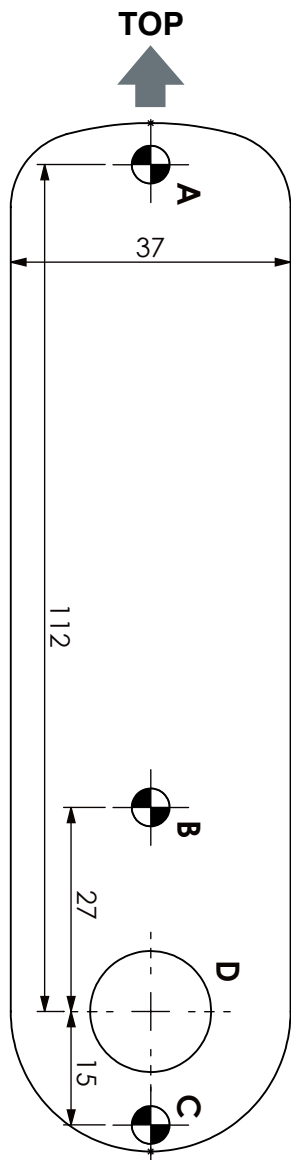

Installation template



3780 Digital Combination Lock **INSTALLATION INSTRUCTIONS**

IMPORTANT NOTE:

Before drilling fixing holes, please ensure that the position of the Digital Combination Lock when fitted will allow clearance for the cam to function.

The installation template may be found on the rear of this sheet and on the bottom of the carton in which your lock was packaged.

Holes A, B & C = Diameter 4.5 / 5.0mm.

Hole D = Diameter 16.0 / 16.5mm.

Always use holes A & D.

Also use either or both holes B & C.

LOWE & FLETCHER LTD

MOORCROFT DRIVE
WEDNESBURY
WEST MIDLANDS
WS10 7DE
ENGLAND

Tel: +44 (0) 121 505 0400

Fax: +44 (0) 121 505 0420

E-mail: sales@lowe-and-fletcher.co.uk

Web: www.lowe-and-fletcher.co.uk

Fitting Instructions

The Digital Combination Lock can be fitted to cupboards, cabinets and lockers etc as a direct replacement for existing cam locks or for the Lowe & Fletcher 3751 Digital Combination Lock. It can also be easily fitted to cupboards and cabinets that do not have an existing locking device.

Special Notes

Before installing the Digital Combination Lock, load the batteries and familiarize yourself with the operation and programming. Unless manufactured to special order, the lock is supplied in the "PRIVATE" operating mode. In this mode, the user must enter a four-digit User Code to open it. The unit will re-lock itself after four seconds. The lock can be opened at any time using the Master Code. Unless manufactured to special order, the default Master Code is 11 33 55 77 and the default User Code is 22 44. These codes are common to all standard locks and it is very important that you set your own personal Master and User Codes. Your lock is not secure until you have changed the default Master Code and User Code. Keep a safe record of your master code as it is not possible to make any programming changes without it. Please see programming guide to set your own codes.

Installation Guide

ENSURE BATTERIES ARE CORRECTLY FITTED BEFORE FIXING LOCK

A) New Installation

Step 1 Place template on door and mark TWO 4.5mm (3/16") holes and ONE 16mm (5/8") hole. (See installation template for details)

IMPORTANT NOTE: Before drilling fixing holes, please ensure that the position of the Digital Combination Lock when fitted will allow clearance for selected cam to work.

Step 2 Drill both fixing holes and the 16mm clearance hole.

Step 3 Fit the Digital Combination Lock to the door by passing the spindle through the 16mm (5/8") hole.

Step 4 Fit at least two fixing bolts to suit your door thickness.

Step 5 Tighten the upper and lower bolt.

Step 6 Select the cam which suits your door and frame and attach it to the square shaft at the end of the spindle using an M4 x 8 screw and domed spring washer.

Step 7 Now check the operation of the lock using the factory User Code 22 44.

Step 8 If the lock is functioning correctly, CHANGE THE DEFAULT MASTER CODE 11 33 55 77 and DEFAULT USER CODE 22 44 and program the lock using the programming and operating instructions enclosed.

B) Replacing existing cam lock with the 3780 Digital Combination Lock

Step 1 Remove existing cam lock.

Step 2 Place installation template over hole left by cam lock and mark TWO 4.5mm (3/16") holes.

Step 3 Drill the two 4.5mm (3/16") fixing holes.

Step 4 Continue installation from step 3 to 8, above.


B) Replacing existing L&F 3751 Digital Combination Lock with the 3780 Digital Combination Lock

Step 1 Remove existing electronic lock.

Step 2 Place installation template over holes left by the lock and mark ONE additional 4.5mm (3/16") hole.

Step 3 Drill the 4.5mm (3/16") fixing hole.

Step 4 Continue installation from step 3 to 8, above.

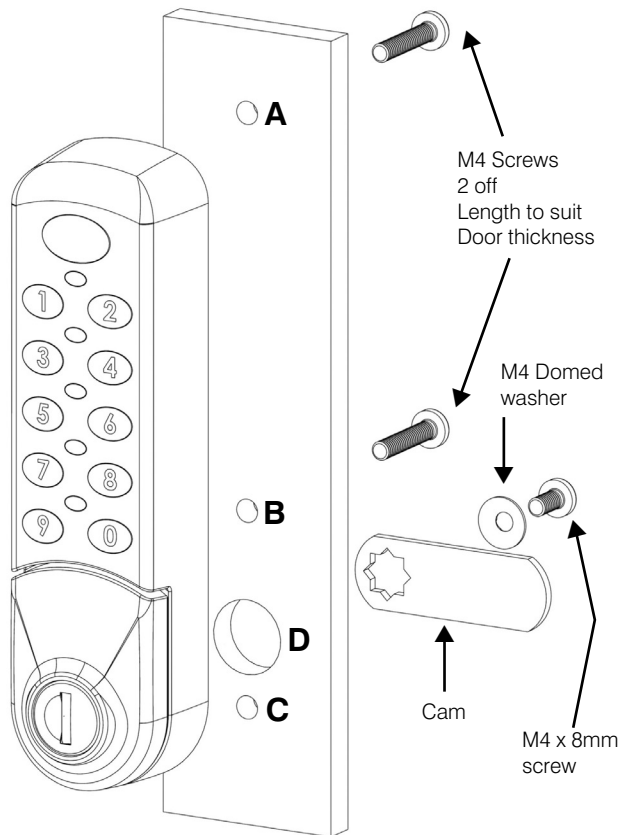

Holes A, B & C = Diameter 4.5 / 5.0mm.

Hole D = Diameter 16.0 / 16.5mm.

Always use holes A & D.

Also use either or both holes B & C.